



Sungrow Hybrid & 3-Phase Inverter & Battery Restart Procedure



STEP


01

Turn off the "Inverter AC Isolator" located next to the inverter, OR the "Main Switch (Inverter Supply)" located in the main switchboard of the house or meter box.

STEP


02

Turn off the "PV Array DC Isolator" which is the black rotary switch located on the bottom of the inverter.

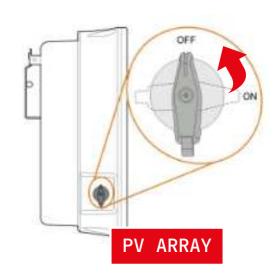

STEP

03

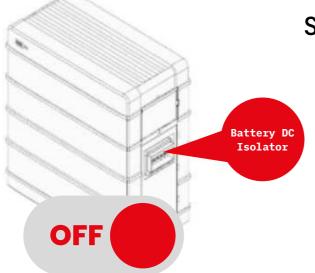

If you have a battery connected to the inverter, turn OFF "Battery Isolator"




04 | FOR 30 MINUTES


STEP

STEP

05 & 06

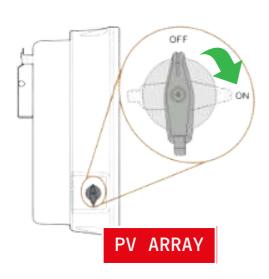

Turn on the PV Array DC Isolator

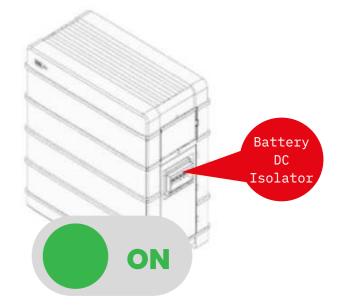

Turn on the Battery DC Isolator

STEP

07

Turn on the "Inverter AC Isolator" located next to the inverter, OR the "Main Switch (Inverter Supply)" located in the main switchboard of the house or meter box.

